
## AK INDUSTRIES INSTALLATION OF TRIPLE GARAGE BASIN

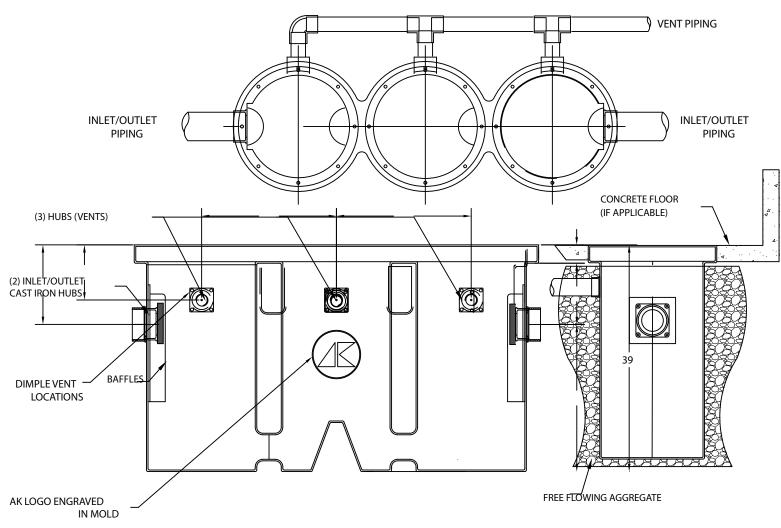

## 1) INSPECT ALL MATERIALS & COMPONENTS TO BE CERTAIN NOTHING WAS DAMAGED IN TRANSIT.

2) EXCAVATE HOLE LARGER THAN TRIPLE GARAGE BASIN.

3) PLACE TRIPLE GARAGE BASIN ACCORDING TO VENT LOCATION AND DISCHARGE LOCATION.

4) INSTALL INLET PIPE AND OUTLET PIPE INTO CAST IRON HUBS.

5) INSTALL VENT PIPE INTO THE (3) CAST IRON VENT FITTINGS

6) BACKFILL WITH FREE FLOWING AGGREGATE GRAVEL ABOVE FITTINGS

7) FINISH WITH CONCRETE TO GRADE IF APPLICABLE